


## EM-900/2400 Installation Instructions

### INSTALLATION STEPS:

- TAPE MOUNT:
- Attach three VHB tape squares to corners of antenna as needed
- Attach antenna to non-metallic surface
- Connect connectors to appropriate radio ports

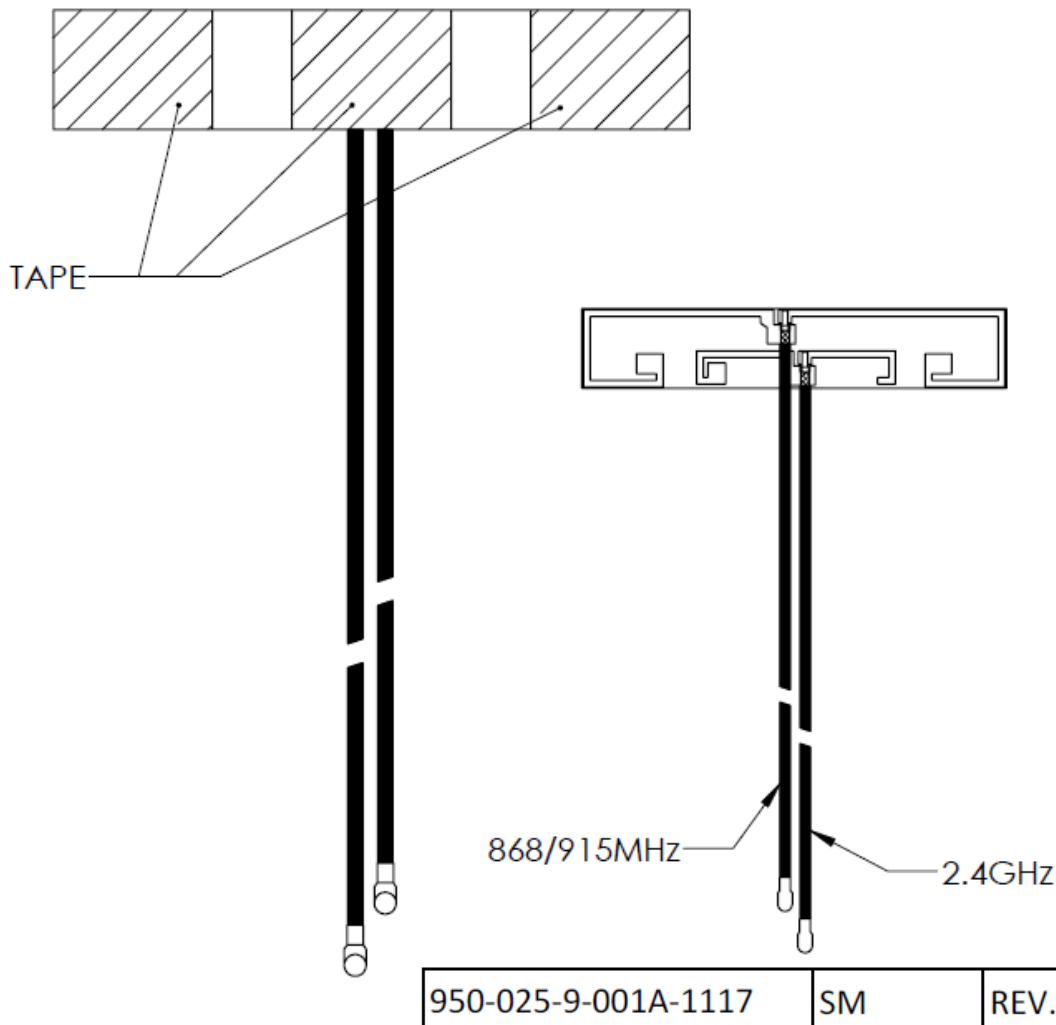

[Terms and Conditions](#)

950-025-9-001A-1117

SM

REV. A



Toll Free: 1-800-648-2800  
Phone: 1-847-671-6690  
Fax: 1-847-250-5120  
Email: [info@mobilemark.com](mailto:info@mobilemark.com)



Phone: +44 1543 459555  
Fax: +44 1543 459545  
Email: [inquiries@mobilemarkeurope.co.uk](mailto:inquiries@mobilemarkeurope.co.uk)



[Mobilemark.com](http://Mobilemark.com)