

BSLMNT2 Heavy Duty Mount Installation Instructions

- **Installation Steps:**
- Install closed end of both “V” bolt assemblies on mast or tower leg
- Tighten “V” block with ¼”-20 nuts & lock washers
- Put on second and third “V” blocks as shown in Figure #1
- Slide antenna down and secure by tightening the third “V” block with ¼”-20 nuts and lock washers
- Maximum diameter for support pipe is 2.25” (5.7cm)
- Maximum diameter for antenna base pipe is 2.00” (5cm)
- NOTE: Tighten nuts to 5 lb./ft. (6.8 Nm)
 - DO NOT overtighten
- **ATTENTION:** Always wear safety glasses and follow the proper safety practices when installing this antenna

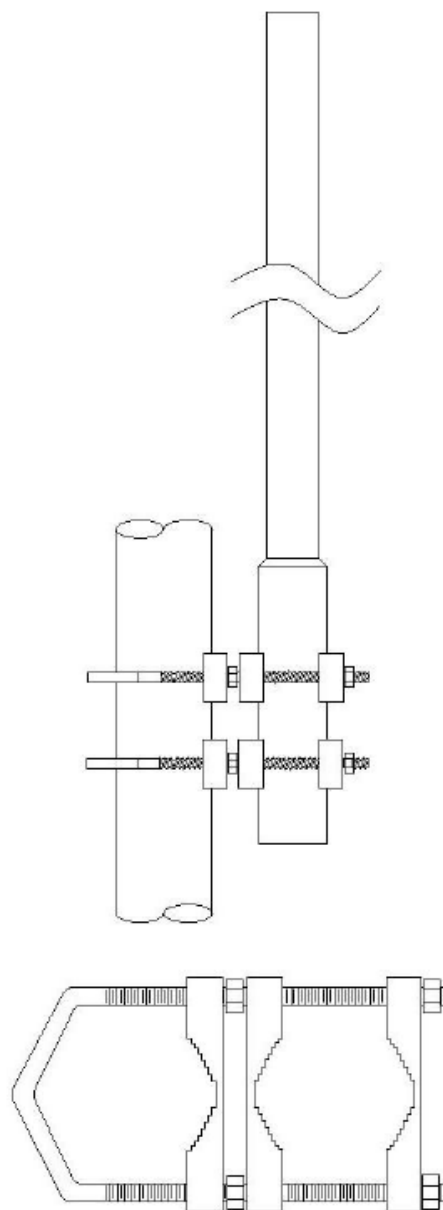


Figure #1



[Terms and Conditions](#)



Toll Free: 1-800-648-2800
Phone: 1-847-671-6690
Fax: 1-847-250-5120
Email: info@mobilemark.com



Phone: +44 1543 459555
Fax: +44 1543 459545
Email: enquiries@mobilemarkeurope.co.uk



Mobilemark.com

950-042-9-001-0518/DR: SM/APP: XX/REV.A