

Low Profile Series Tamperproof Antennas Installation Instructions

Products covered by this guide:

B16XX Series (Ground Plane provided)


B46XX Series (Ground Plane provided)

A16XX Series (Ground Plane not provided)


A46XX Series (Ground Plane not provided)

Installation Steps:

- Drill a 3/8" (9.5mm) diameter hole for a Mini UHF connector or a 5/8" (15.9mm) diameter hole for an "N" connector
- Feed the connector through the hole
- Attach the Washer and Hex Nut
- Tighten nut to 5 lb./ft. (6.8 Nm) Hand tighten nuts for ceiling tiles
- **NOTE:** DO NOT overtighten
- **ATTENTION:** Always wear safety glasses and follow the proper safety practices when installing this antenna

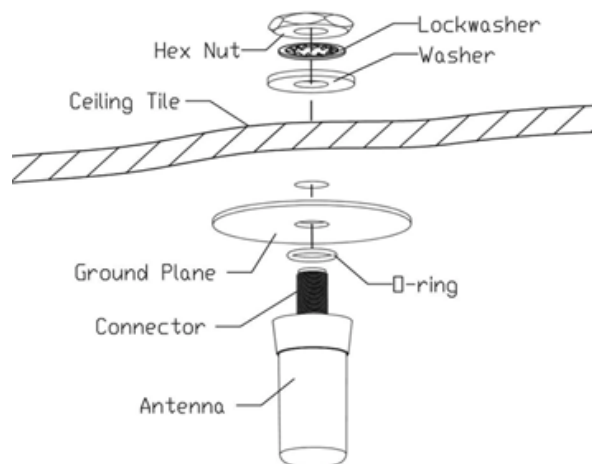

Shown: B46XX Series

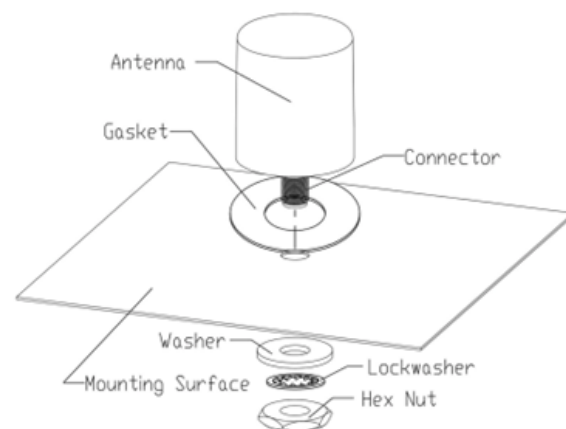

Shown: A16XX Series



[Terms and Conditions](#)



Toll Free: 1-800-648-2800
Phone: 1-847-671-6690
Fax: 1-847-250-5120
Email: info@mobilemark.com



Phone: +44 1543 459555
Fax: +44 1543 459545
Email: enquiries@mobilemarkeurope.co.uk



Mobilemark.com

950-054-9-001-0119 DR: GK APP: LW REV. C