


LLP & LLPW Installation Instruction

Installation Steps:

- Drill a 7/8" (22.3mm) diameter hole through the mounting surface. (1 sq-ft ground plane recommended)
- Feed the cable(s) and base bolt through the hole.
- OPTIONAL: If additional sealing is required, a bead of silicone can be applied to the gasket
- Attach the hex nut.
- Tighten nut to 5 lb./ft. (6.8 Nm).
- NOTE: DO NOT overtighten
- NOTE: If the underside of the base bolt is exposed, a sealant is required

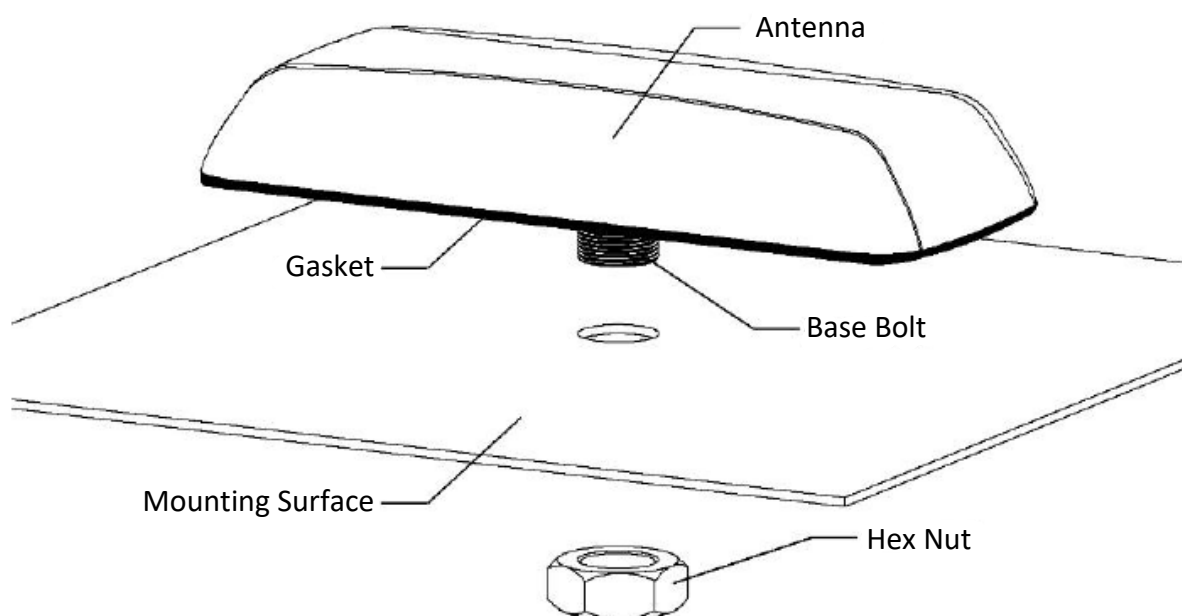

ATTENTION: Always wear safety glasses and follow the proper safety practices when installing this antenna.



Terms and Conditions



Toll Free: 1-800-648-2800
Phone: 1-847-671-6690
Fax: 1-847-250-5120
Email: info@mobilemark.com



Phone: +44 1543 459555
Fax: +44 1543 459545
Email: enquiries@mobilemarkeurope.co.uk



Mobilemark.com

950-023-9-001-0617/DR: SM/APP: JM/REV. B