


Battery Tap Installation Instruction

High Current Connector for Electrical Automotive Accessories

Installation Steps:

- Strip insulation 3/8" (9.5mm) from end of HOT lead going to accessory
- Loosen short set screw, insert lead from accessory into hole in the Battery Tap then tighten set screw
- Place Battery Tap with lead attached onto HOT battery cable. Tighten long set screw.
- **CAUTION:** DO NOT ground the allen wrench
- Set screws should be tightened until tops are below the insulated surface of the Battery Tap
- **NOTE:** the set screw has a hollow tip which will puncture the cable insulation making electrical contact with the conductor
- **ATTENTION:** Always wear safety glasses and follow the proper safety practices when installing this accessory

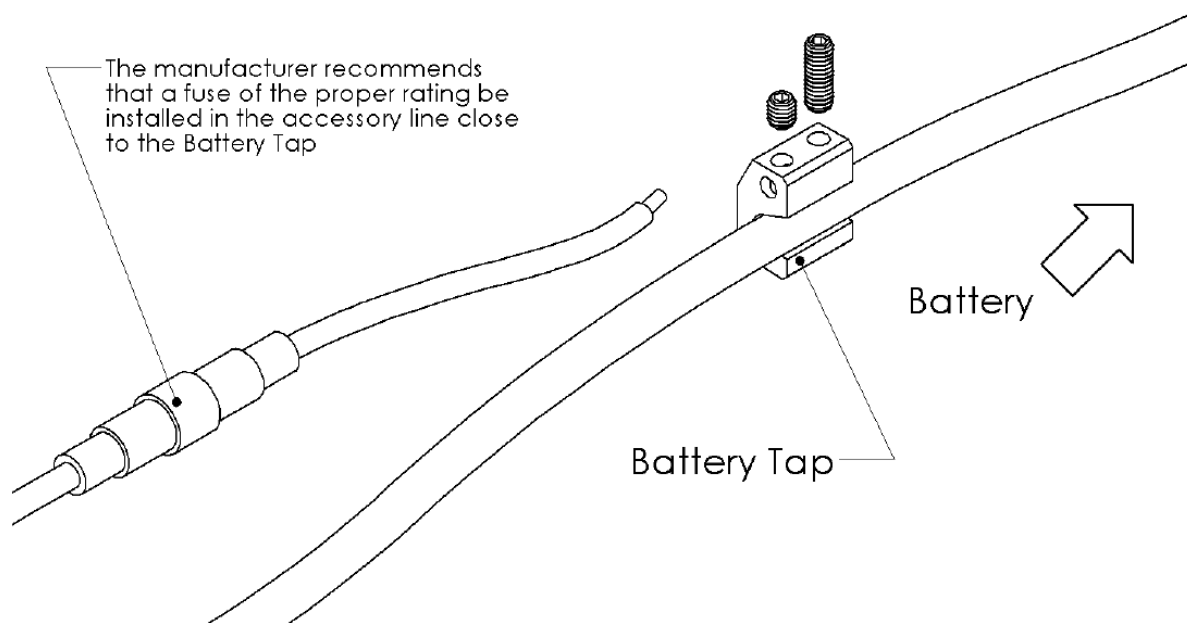

Terms and Conditions



Toll Free: 1-800-648-2800
Phone: 1-847-671-6690
Fax: 1-847-250-5120
Email: info@mobilemark.com



Phone: +44 1543 459555
Fax: +44 1543 459545
Email: enquiries@mobilemarkeurope.co.uk



Mobilemark.com

950-059-9-001-0319 DR: SM APP: LW REV. A