

XW Panel Indoor Series Installation Instruction

Installation Steps:



- Set the orientation of the bracket by loosening the knob, moving the upper part and retightening the knob
- Attach the antenna to the bracket using the supplied hardware
- Tighten nut to 5 lb./ft. (6.8 Nm)
- Attach the wall attachment to the wall
- Slide the antenna with the bracket in the wall attachment and use the screw to secure it

NOTE: DO NOT overtighten

ATTENTION: Always wear safety glasses and follow the proper safety practices when installing this antenna.

Products covered by this guide:

XW-24I-FP7 / XW-5XI-FP13 / XW-5XI-FP7

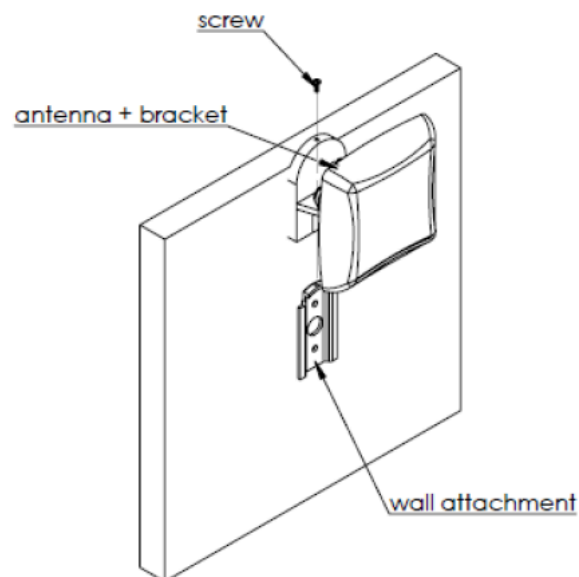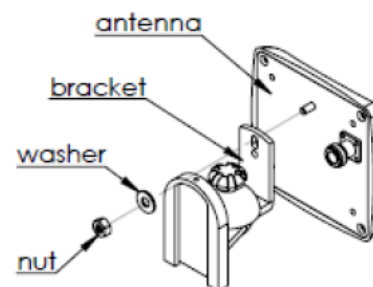

[Terms and Conditions](#)



Toll Free: 1-800-648-2800
Phone: 1-847-671-6690
Fax: 1-847-250-5120
Email: info@mobilemark.com



Phone: +44 1543 459555
Fax: +44 1543 459545
Email: enquiries@mobilemarkeurope.co.uk



Mobilemark.com

950-041-9-001-0318 DR: JM APP: SM REV. A