
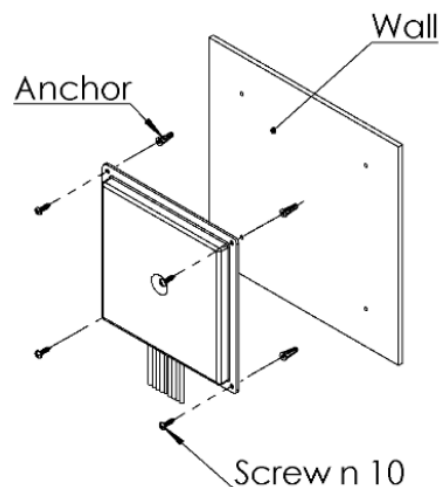


PNM 900 Series Installation Instruction

Installation Steps For Tape Mount:

- Clean both the antenna and mounting surface with alcohol wipes
- Attach supplied tape on the antenna following the figures below
- Attach antenna to cleaned surface with the GPS orientation in mind
- Use the antenna to mark the location of where the anchors will go on the wall
- Install the anchors
- Use number 10 screws to attach the antenna

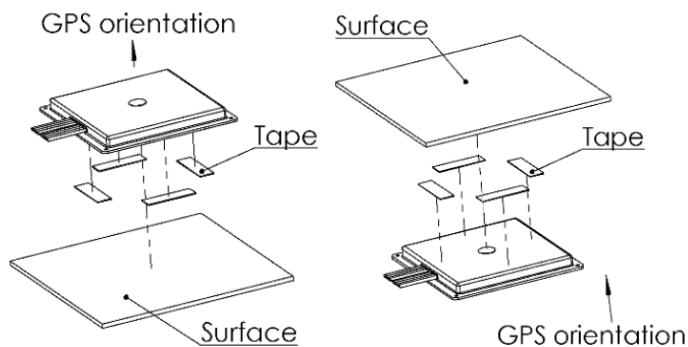

Installation Steps For Wall Mount:

- **ATTENTION:** Mounting requires anchor and number 10 screws
- **ATTENTION:** Always wear safety glasses and follow the proper safety practices when installing this antenna.



Terms and Conditions



Toll Free: 1-800-648-2800
Phone: 1-847-671-6690
Fax: 1-847-250-5120
Email: info@mobilemark.com



Phone: +44 1543 459555
Fax: +44 1543 459545
Email: enquiries@mobilemarkeurope.co.uk



Mobilemark.com

950-117-9-001-0325/DR: GK/APP: JM/REV. A