

PNM Series Installation Instruction


Installation Steps:

TAPE MOUNT:

- Attach four VHB tape squares to corners of antenna
- Attach antenna to flat non-metallic surface with cable facing up or down

WALL ANCHOR MOUNT:

- Use template center marks
- Drill $\varnothing 7/32"$ (5.6mm) holes into wall
- Install supplied anchor and screw with the head $1/8"$ (3.2mm) off wall
- Attach antenna to flat non-metallic surface with cable facing up or down

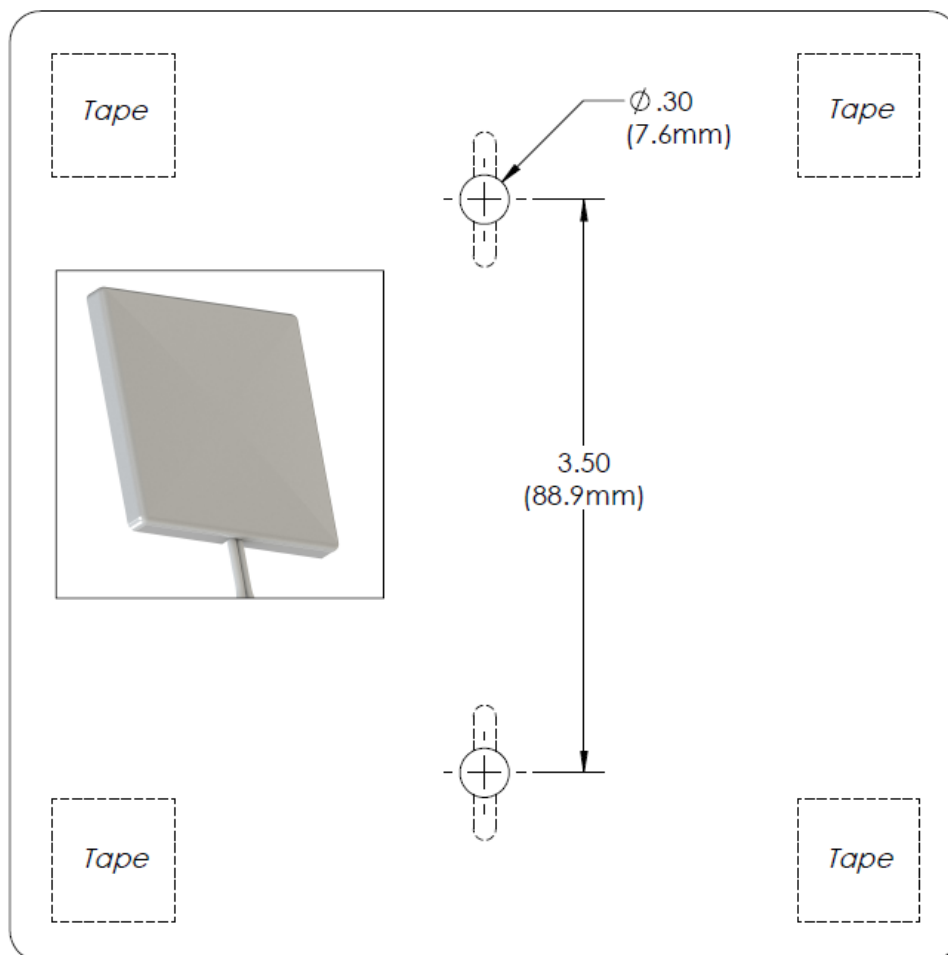

Terms and Conditions



Toll Free: 1-800-648-2800
Phone: 1-847-671-6690
Fax: 1-847-250-5120
Email: info@mobilemark.com



Phone: +44 1543 459555
Fax: +44 1543 459545
Email: enquiries@mobilemarkeurope.co.uk



Mobilemark.com

950-021-9-001A-0517 SM REV. A