



CLTM Installation Instructions

Installation Guidelines

- Attach hex nut and mounting bracket to the antenna

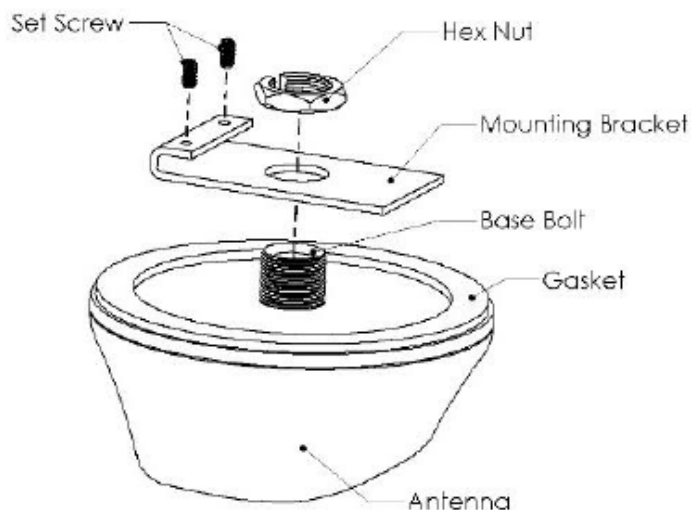

NOTE: A small notch may be required on the clamp side of the bracket

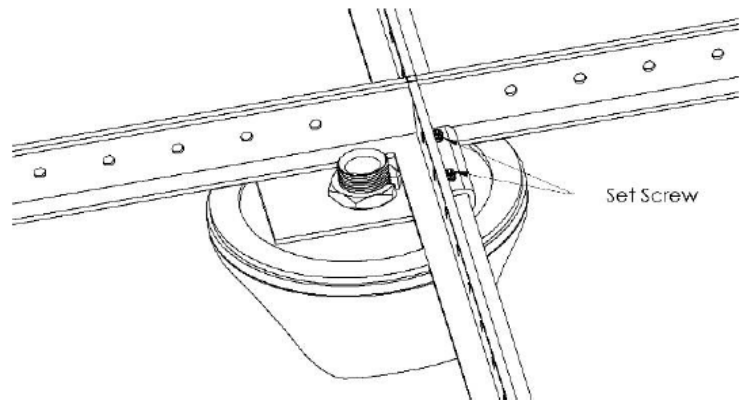

- ATTENTION: Always wear safety glasses and follow the proper safety practices when installing this antenna

- Cut a 2"-2 ½" (50.8mm-63.5mm) notch out of the corner of the ceiling tile
- Attach mounting bracket to suspension grid with supplied set screws
- Pull cables through the cut out on the ceiling tile and drop in place on the suspension grid



Terms and Conditions



Toll Free: 1-800-648-2800
Phone: 1-847-671-6690
Fax: 1-847-250-5120
Email: info@mobilemark.com



Phone: +44 1543 459555
Fax: +44 1543 459545
Email: enquiries@mobilemarkeurope.co.uk



Mobilemark.com

950-046-9-001-0718 DR: SM APP: XX REV. A