


## Micro Body / Stud Mount Antenna Installation Instruction

### Models Covered: MRM-900/1900, MRM3-2400/5500, MRM3-2400,-2300,-2600,-3500,-5500.

#### Installation Steps:

- These Micro Body / Stud Mount antennas can be mounted to any metal surface; a ground plane is required. To mount the antennas, a hole must be drilled or punched into the surface. The diameter of the hole must be at least ½" (12.7mm); but not larger than 5/8" (15.88mm). The surface should not thicker than ¼" (6.35mm).
- To secure the antenna mounting, it is necessary to also have access to the underside of the hole. For optimal performance, it is recommended that the antennas be mounted on a horizontal metal surface. This will provide the best overall performance.
- To attach the antenna, first remove the nut and lock washer. The attached gasket provides a watertight seal to prevent moisture from entering. Feed the cable through the hole, seat the antenna on the surface, reattach the nut and tighten. The nut should be tight to properly seal the gasket. Tighten the nut with a wrench. NOTE: The maximum torque spec is 5ft-lbs. Finally, feed the cable to the receiver, and attach directly, or thru additional jumpers.

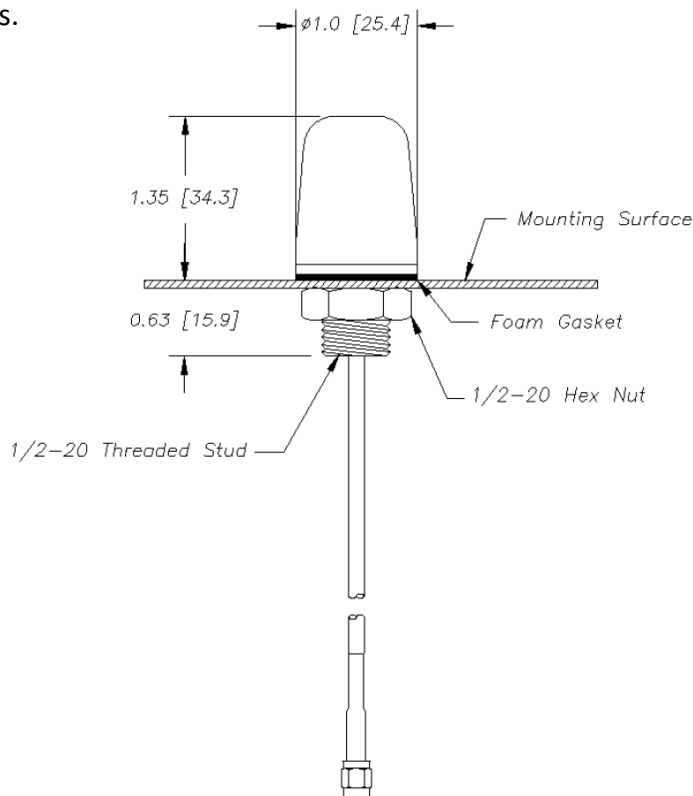

Terms and Conditions



Toll Free: 1-800-648-2800  
Phone: 1-847-671-6690  
Fax: 1-847-250-5120  
Email: [info@mobilemark.com](mailto:info@mobilemark.com)



Phone: +44 1543 459555  
Fax: +44 1543 459545  
Email: [enquiries@mobilemarkeurope.co.uk](mailto:enquiries@mobilemarkeurope.co.uk)



[Mobilemark.com](http://Mobilemark.com)

950-103-9-001-0721/DR: SM/APP: XX/REV. A