


LTX1788 Series Installation Instruction

Installation Steps:

- Drill a 1.0" (25.4mm) diameter hole through the mounting surface. (1 sq-ft ground plane recommended).
- Feed the Cable(s) and base bolt through the hole.
- OPTIONAL: If additional sealing is required, a bead of silicone can be applied to the gasket.
- Attach the hex nut.
- Tighten nut to 9lb./ft/ (12 Nm).
- NOTE: DO NOT overtighten
- NOTE: If the underside of the base bolt is exposed, sealing is required.
- ATTENTION: Always wear safety glasses and follow the proper safety practices when installing this antenna.

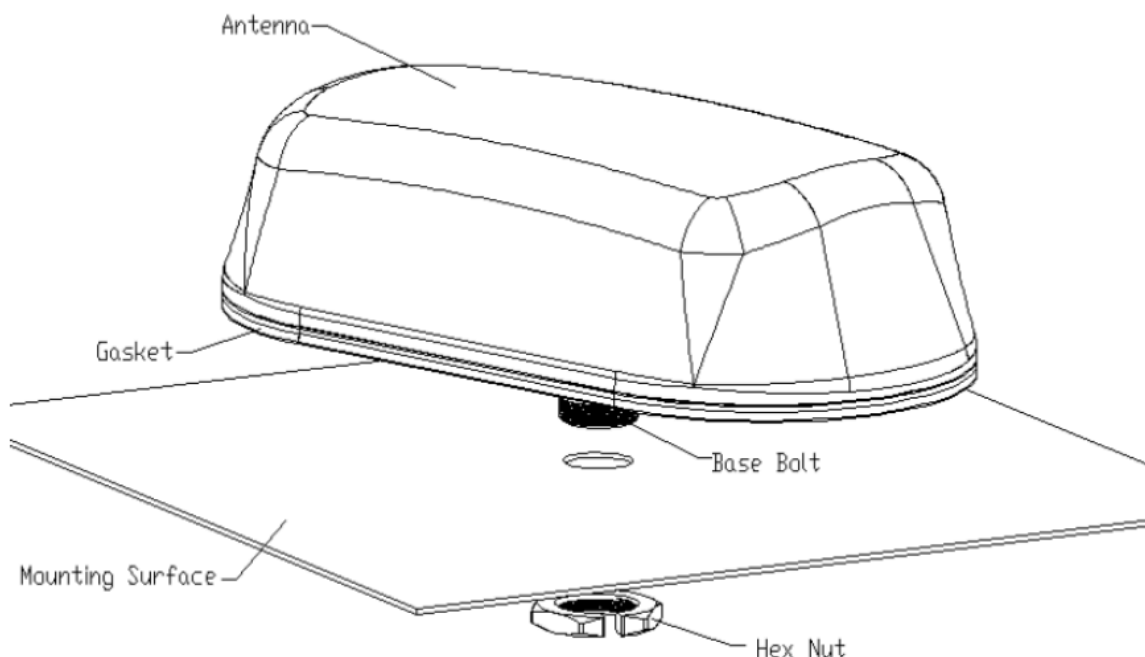

Terms and Conditions



Toll Free: 1-800-648-2800
Phone: 1-847-671-6690
Fax: 1-847-250-5120
Email: info@mobilemark.com



Phone: +44 1543 459555
Fax: +44 1543 459545
Email: enquiries@mobilemarkeurope.co.uk



Mobilemark.com

950-116-9-001-1224/DR: GK/APP: TC/REV. A