
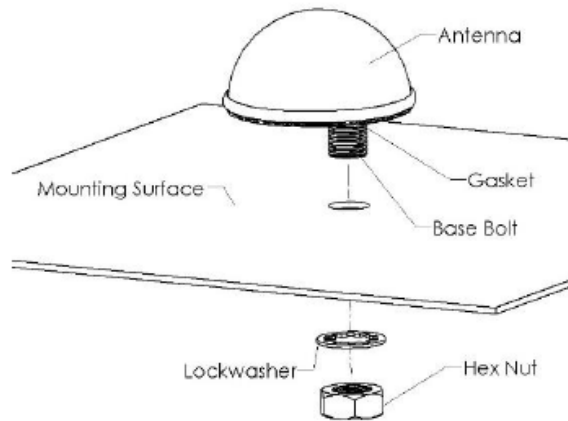


DM Series Installation Instruction

Installation Steps:

- Drill a 5/8" (15.9mm) diameter hole through the mounting surface
- (1 sq-ft ground plane recommended)
- Remove all the paper from the gasket.

- Attach the lock washer and hex nut.
- Tighten nut to 5 lb./ft. (6.8 Nm).
 - **NOTE:** DO NOT overtighten

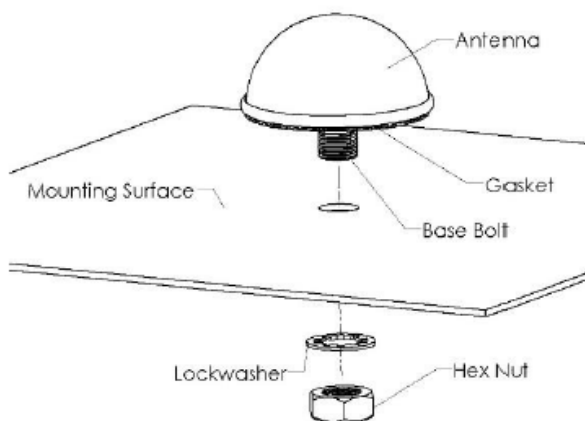

- Feed the cable(s) and base bolt through the hole.
 - **NOTE:** Some antennas may have an offset base bolt
- **OPTIONAL:** If additional sealing is required, a bead of silicone can be applied to the gasket

Shown: offset base bolt

- **NOTE:** If the underside of the base bolt is exposed, a sealant is required



Terms and Conditions



Toll Free: 1-800-648-2800
Phone: 1-847-671-6690
Fax: 1-847-250-5120
Email: info@mobilemark.com



Phone: +44 1543 459555
Fax: +44 1543 459545
Email: enquiries@mobilemarkeurope.co.uk



Mobilemark.com

950-004-9-001B-0813 SM REV. B