


HD3 Installation Instruction

Installation Steps:

- Drill a 3/4" (19.1mm) diameter hole through mounting surface (1.5 sq-ft minimum ground plane recommended).
- Feed the cable(s) and base bolt through the hole. The plastic spacer should be isolating the base bolt from the ground.
- Slide the plastic washer up to the base bolt and then the Hex Nut.
- Tighten nut to 5 lb./ft. (6.8 Nm)
- **NOTE:** DO NOT overtighten
- **NOTE:** If the underside of the base bolt is exposed, sealing is required
- **OPTIONAL:** If additional sealing is required, a bead of silicone can be applied to the gasket
- **ATTENTION:** Always wear safety glasses and follow the proper safety practices when installing this antenna.

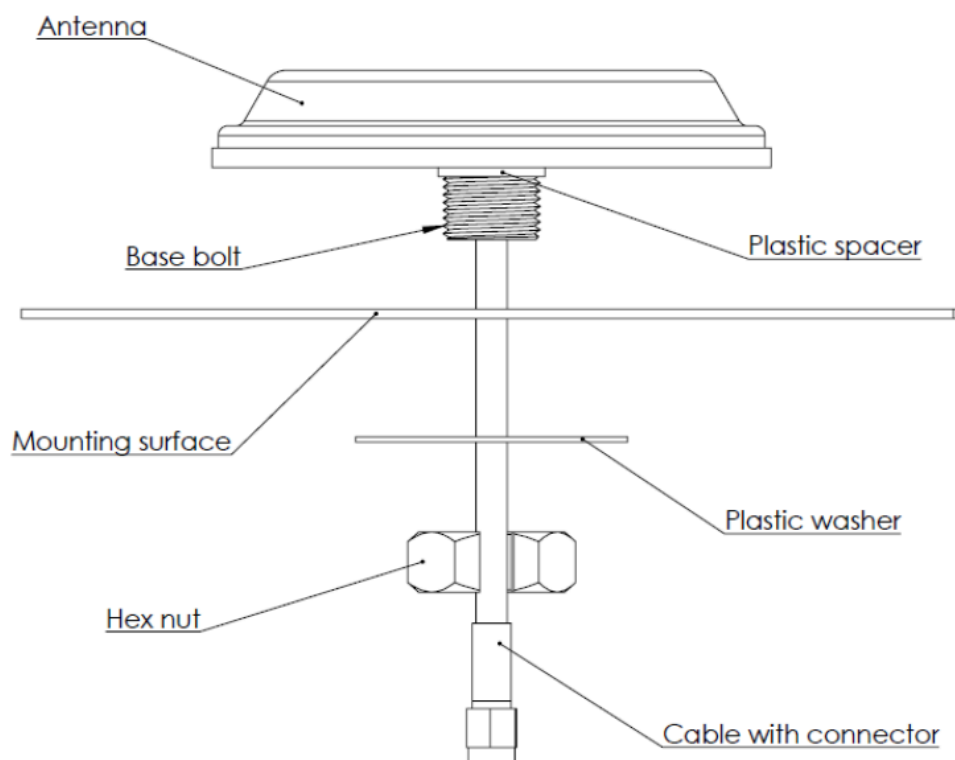

Terms and Conditions



Toll Free: 1-800-648-2800
Phone: 1-847-671-6690
Fax: 1-847-250-5120
Email: info@mobilemark.com



Phone: +44 1543 459555
Fax: +44 1543 459545
Email: enquiries@mobilemarkeurope.co.uk



Mobilemark.com

950-098-9-001-0919/DR: JM/APP: SM/REV. A