



LPD Series Installation Instruction

Installation Steps:

- Drill a 1" (2.5cm) minimum hole on a flat mounting surface
- When the antenna is mounted on a metal surface it should be at least 36" (91.4cm) diameter. If mounted to a non-metal surface use 2" x 24" Aluminum tape strips (FIG 1)
- Put connector through hole
- Using the Antenna's Mounting Holes as a guide, drill #21 size holes with the supplied Centering Drill Bushing tool (FIG 2) NOTE: Secure antenna on to mounting surface with tape before drilling
- Use #10 hardware to attach antenna to surface
- For sealing use Silicone Sealant around the perimeter of the antenna
- **ATTENTION:** Always wear safety glasses and follow the proper safety practices when installing this antenna.

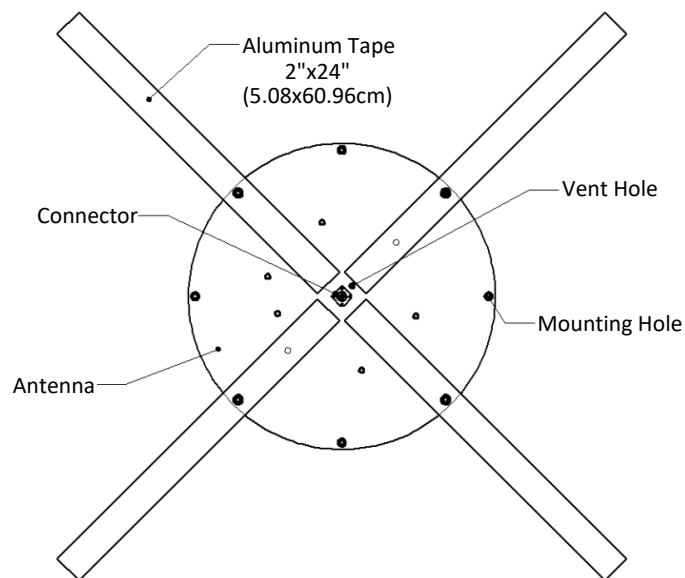

*Aluminum tape ground plane layout
(FIG 1)*

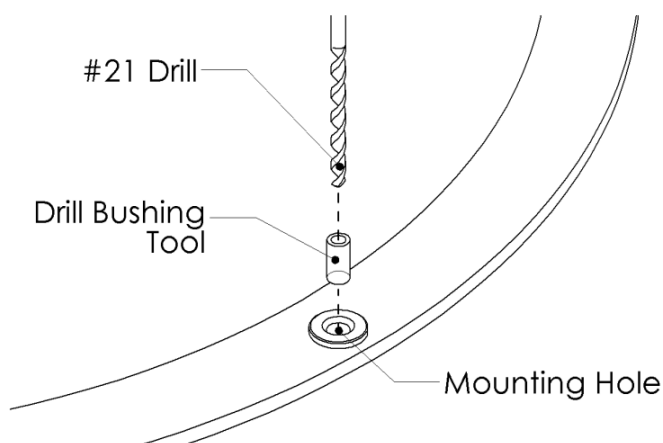

(FIG 2)



Terms and Conditions



Toll Free: 1-800-648-2800
Phone: 1-847-671-6690
Fax: 1-847-250-5120
Email: info@mobilemark.com



Phone: +44 1543 459555
Fax: +44 1543 459545
Email: enquiries@mobilemarkeurope.co.uk



Mobilemark.com

950-092-9-001-0819