
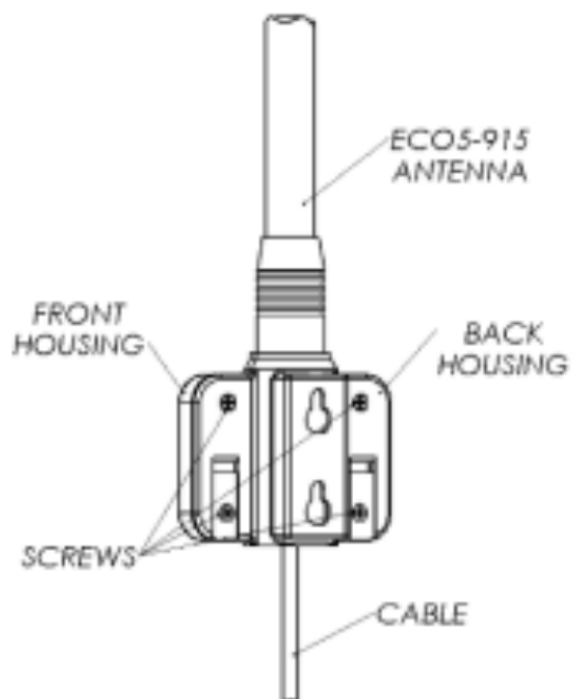


ECO-SERIES – MAIN HOUSING ASSEMBLY INSTRUCTIONS

Installation Steps:

- Place Antenna into Front Housing
- Place Back Housing over Antenna and onto Front Housing
- Using the 4 (#4 self-taping screws), screw the Back Housing onto Front Housing
- **ATTENTION:** Always wear safety glasses and follow the proper safety practice when installing this antenna

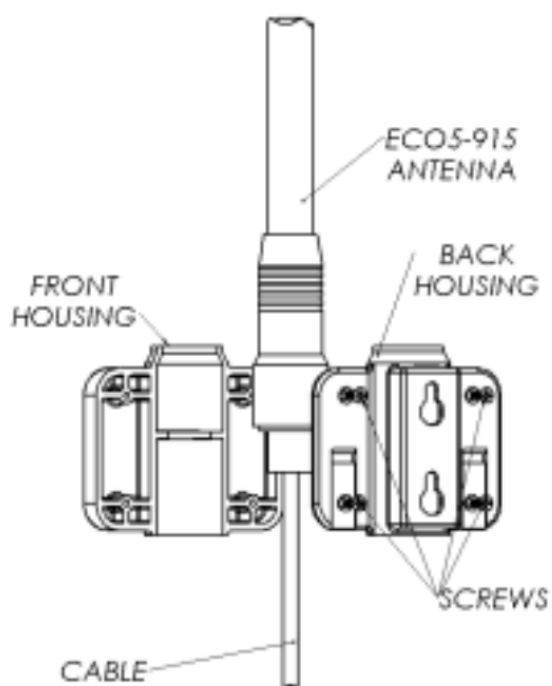

Terms and Conditions



Toll Free: 1-800-648-2800
Phone: 1-847-671-6690
Fax: 1-847-250-5120
Email: info@mobilemark.com



Phone: +44 1543 459555
Fax: +44 1543 459545
Email: enquiries@mobilemarkeurope.co.uk



Mobilemark.com

950-121-9-001-0325/DR: GK/APP: XX/REV.A