


ECO-SERIES - SCREW WALL MOUNT INSTALLATION INSTRUCTIONS

Installation Steps:

- Locate desired placement on a wall, using the Back Housing as a template marking the 2-hole locations (top of keyhole)
- Drill 2 (1/8" pilot hole for screws only) or 2 (3/16" holes for Plastic Wall Anchors) Tap the Plastic Wall Anchors into holes
- Place Antenna into Front Housing
- Place Back Housing over Antenna and onto Front Housing
- Using the 4 (#4 self-taping screws), screw the Back Housing onto Front Housing
- Insert the 2 screws into wall or Plastic Wall Anchors, allow enough space from wall to slide the assembly onto screws
- Slide the Main Housing Assembly with Antenna over the screws and slide down into position
- **ATTENTION:** Always wear safety glasses and follow the proper safety practice when installing this antenna

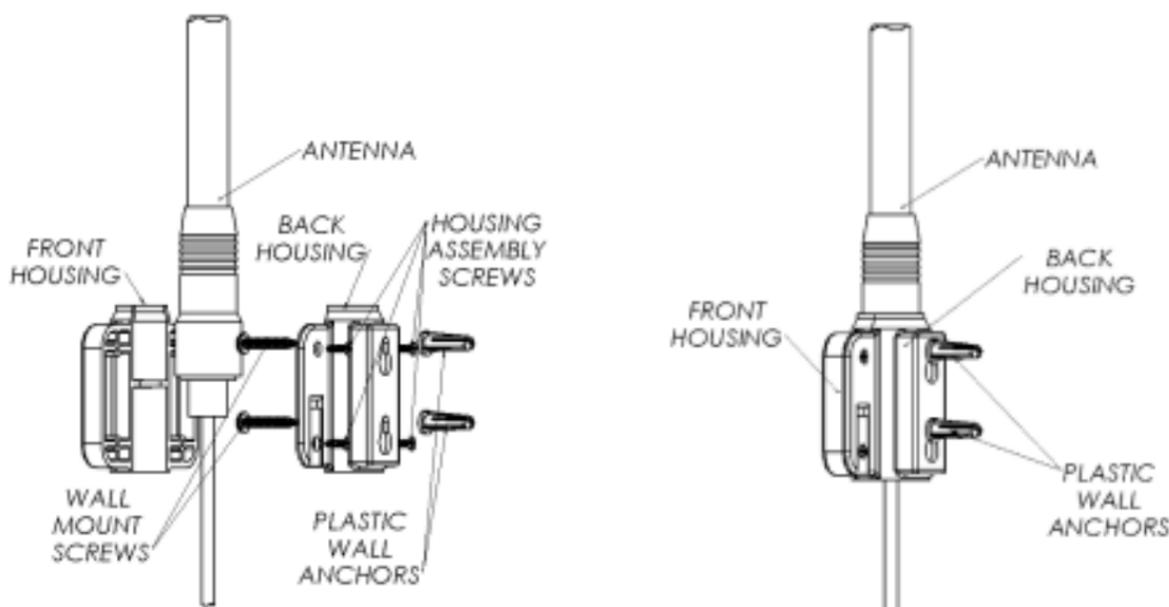

[Terms and Conditions](#)



Toll Free: 1-800-648-2800
Phone: 1-847-671-6690
Fax: 1-847-250-5120
Email: info@mobilemark.com



Phone: +44 1543 459555
Fax: +44 1543 459545
Email: enquiries@mobilemarkeurope.co.uk



Mobilemark.com

950-121-9-001-0325/DR: GK/APP: XX/REV.A