
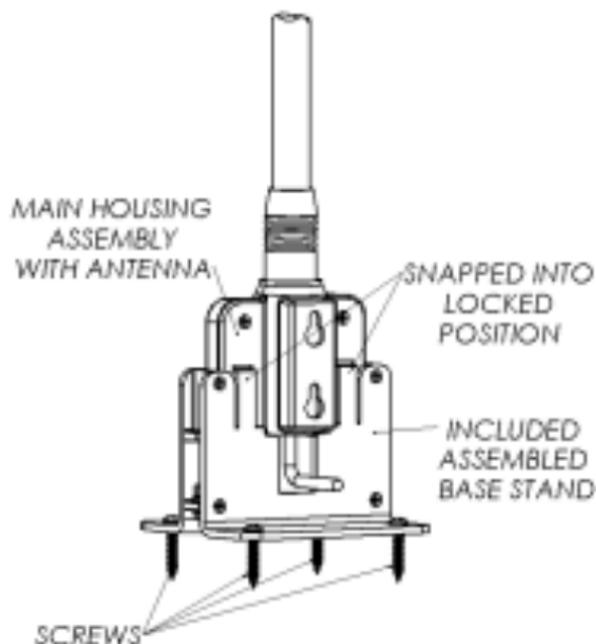


ECO-SERIES - DESK SCREW MOUNT INSTALLATION INSTRUCTIONS

Installation Steps:

- Locate your desired mounting location
- Using the Included Assembled Base Stand as a template, mark the 4-hole locations
- Drill 4 pilot holes (.125"-1/8: drill bit), place the Included Assembled Base Stand and screw to desk
- Take the Main Housing Assembly with Antenna
- Bend the cable of the Antenna as you slide the Main Housing Assembly with Antenna into Included Assembled Base Stand
- Make sure the Main Housing Assembly with Antenna snaps into place into the Included Assembled Base Stand. You should hear a click
- **ATTENTION:** Always wear safety glasses and follow the proper safety practice when installing this antenna

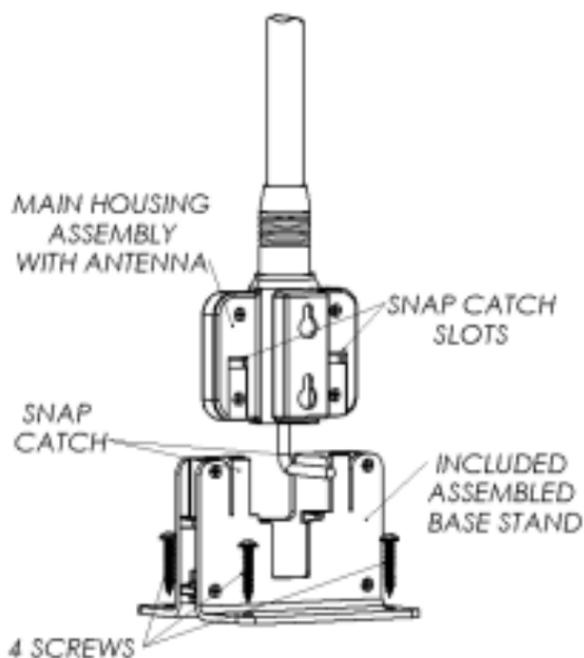

[Terms and Conditions](#)



Toll Free: 1-800-648-2800
Phone: 1-847-671-6690
Fax: 1-847-250-5120
Email: info@mobilemark.com



Phone: +44 1543 459555
Fax: +44 1543 459545
Email: enquiries@mobilemarkeurope.co.uk



Mobilemark.com

950-121-9-001-0325/DR: GK/APP: XX/REV.A